

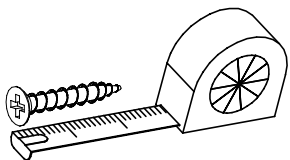
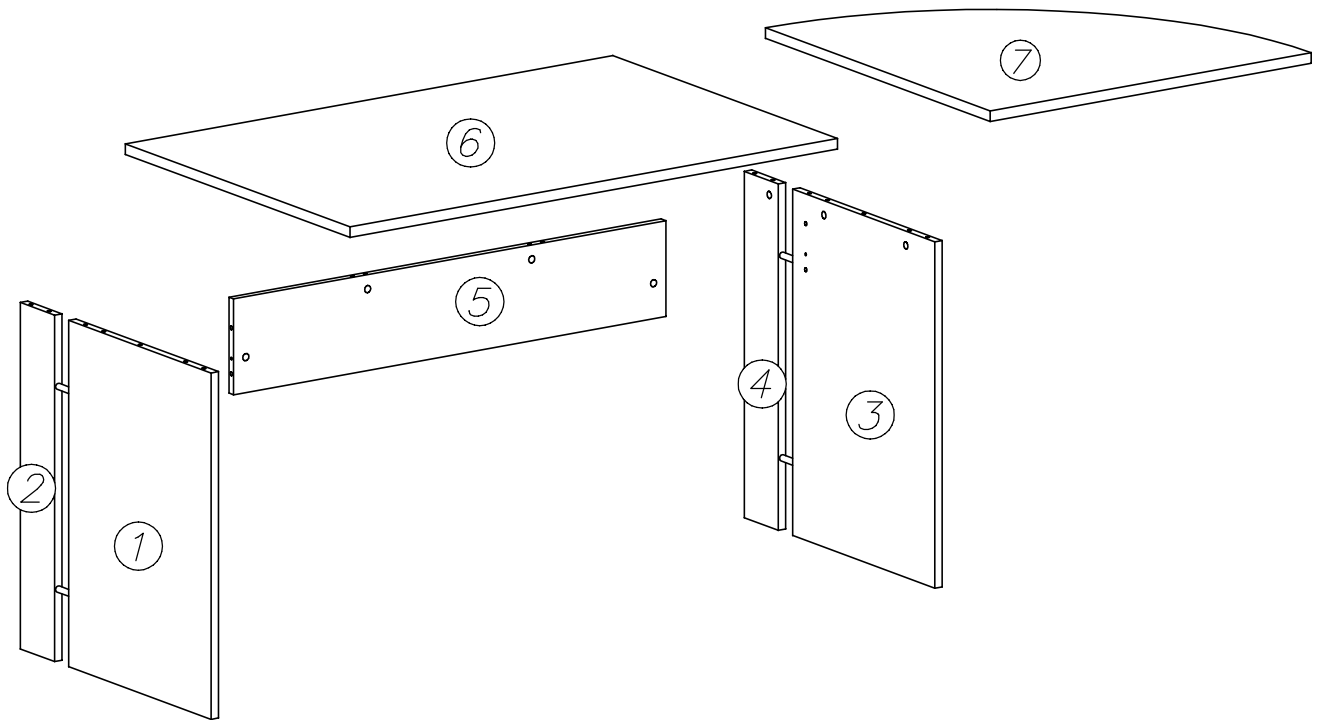
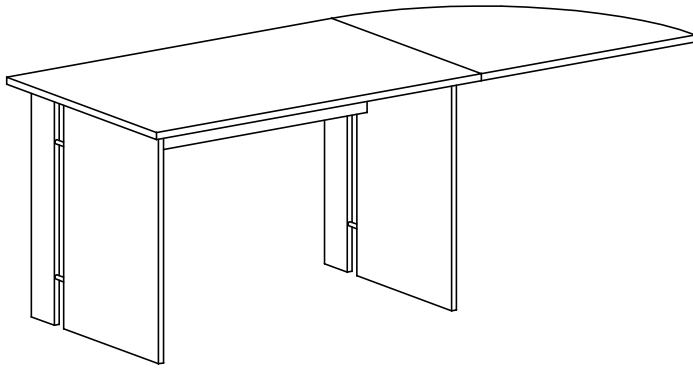
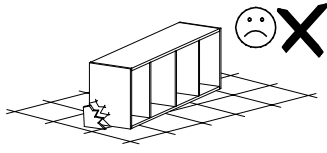
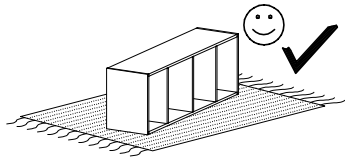




1/4

OMEGA


Schreibtisch 120 mit Eckplatte

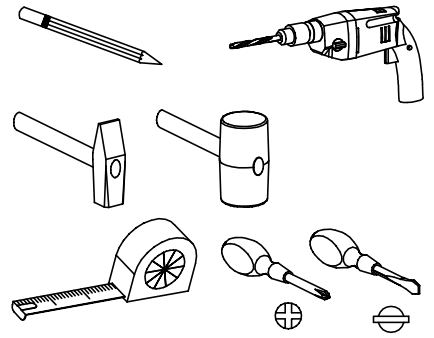

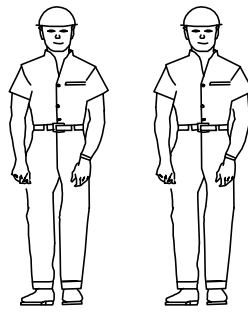

G11  4 x 20 x24


M1  x6


W1  x2


P3  x6


B4  ø8 x 95 x4











B1  ø8 x 35 x14


K5  x10

K3  ø15 x 14 x6


K2  ø15 x 16 x4

R12  ø13 x 50 x4

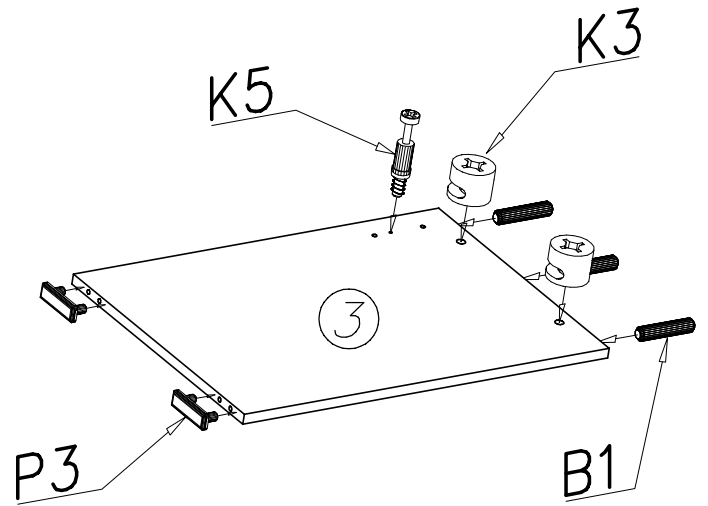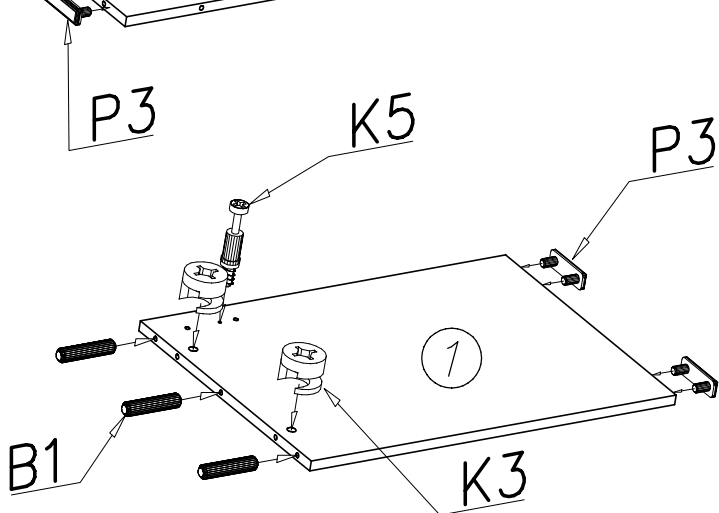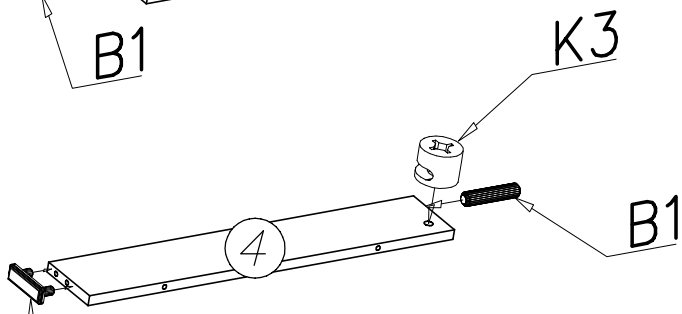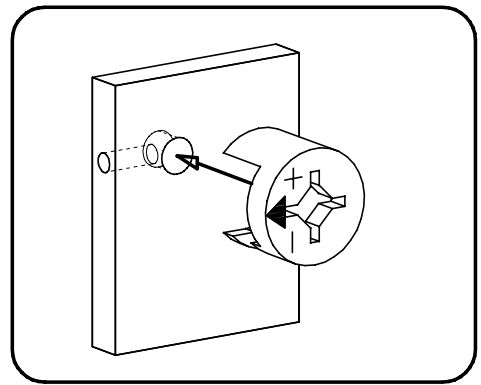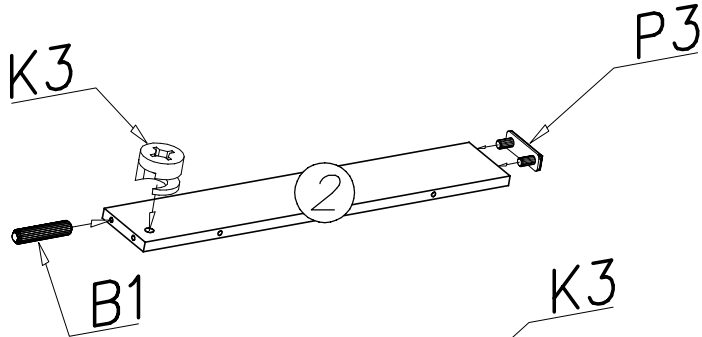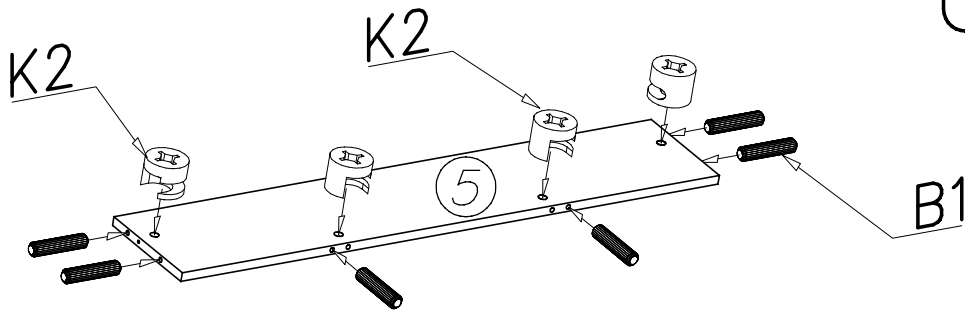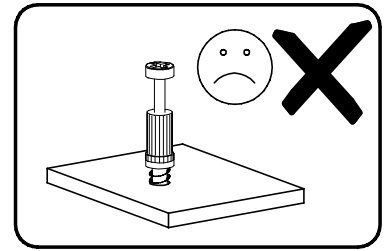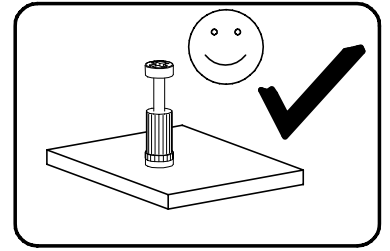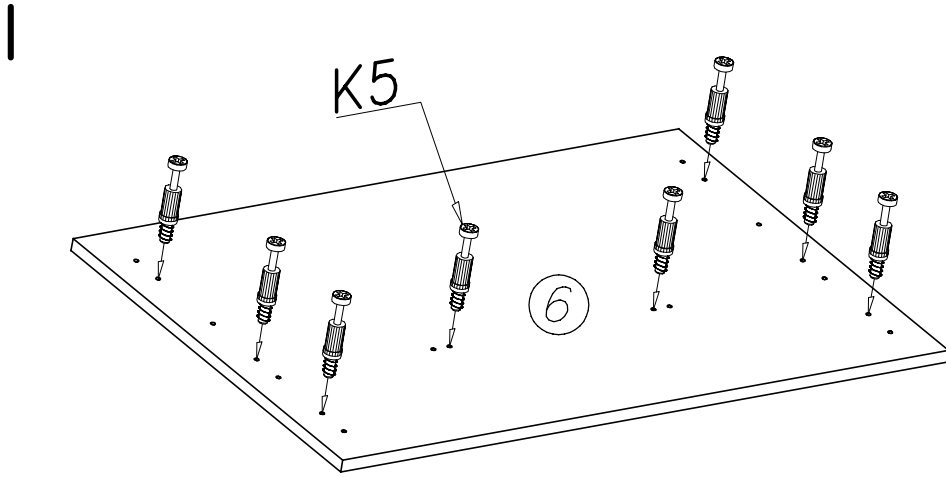






II

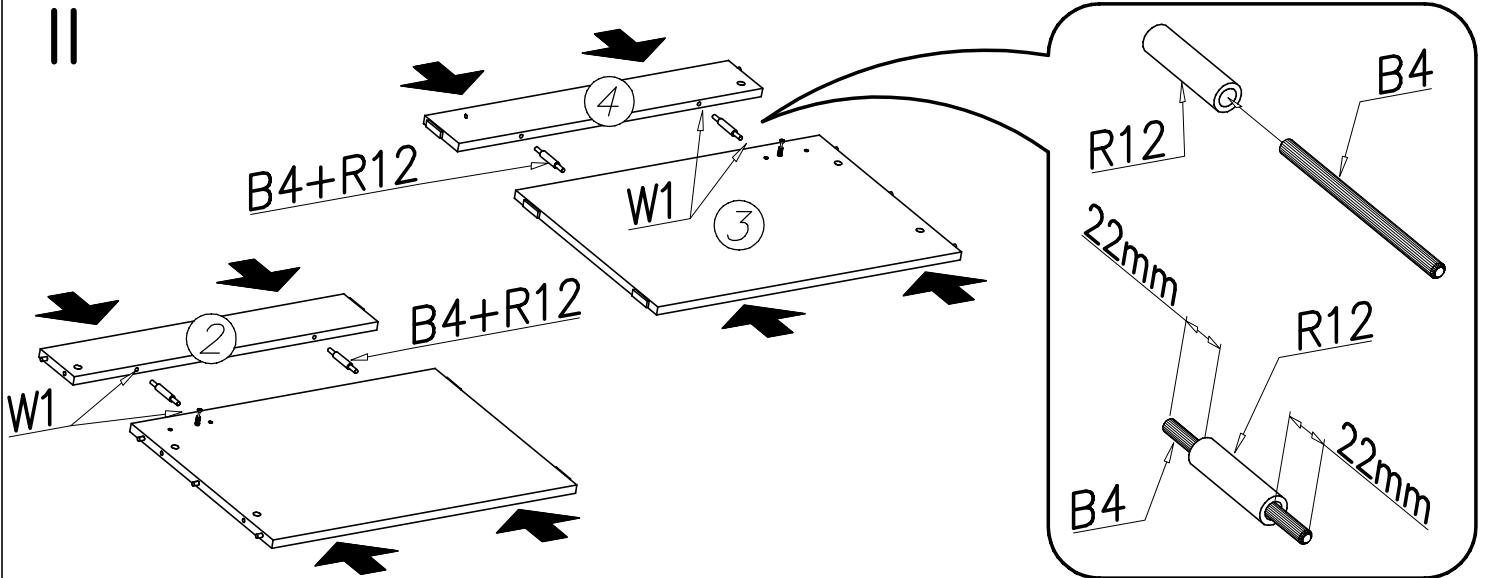


III

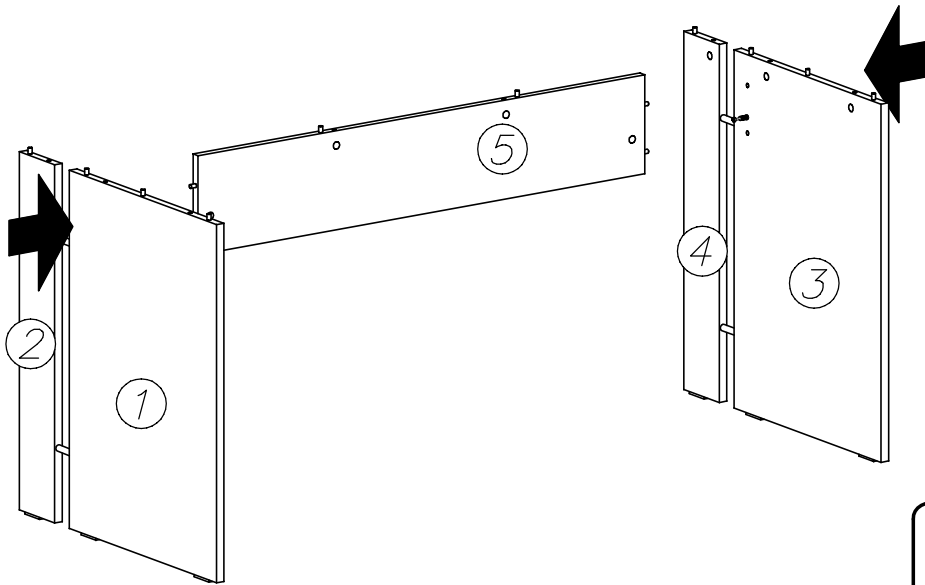


IV

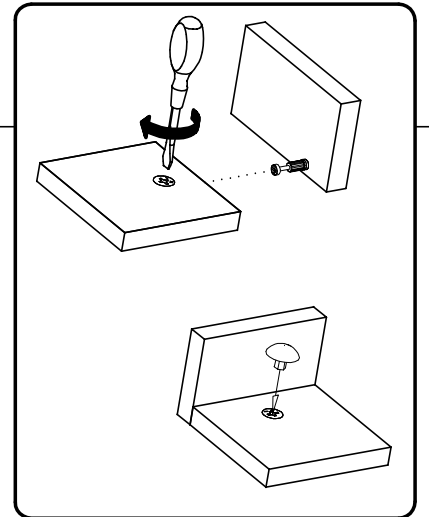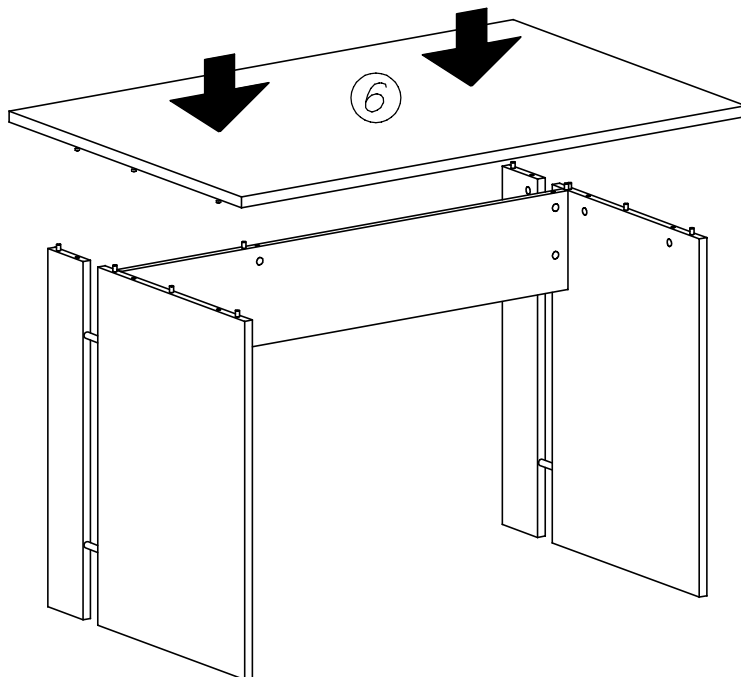




V

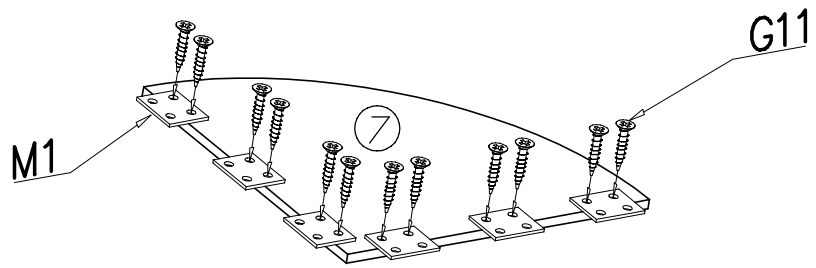








VI

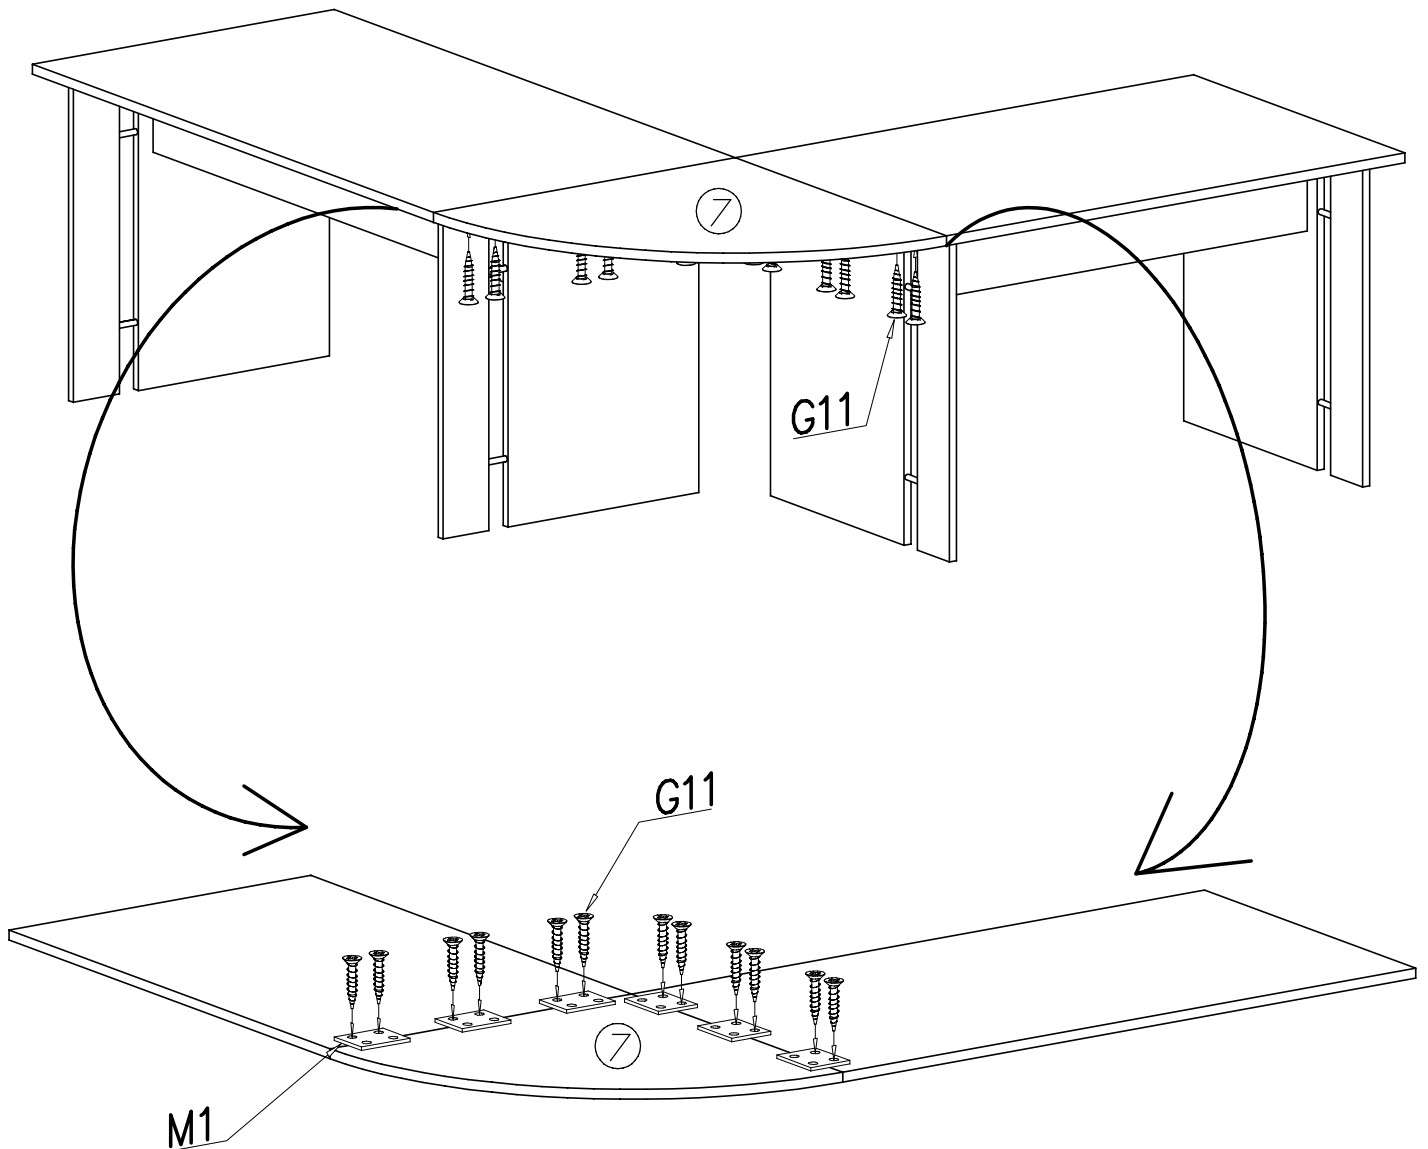



1/3


BONN

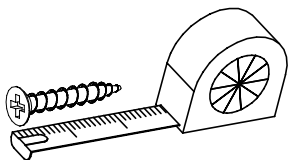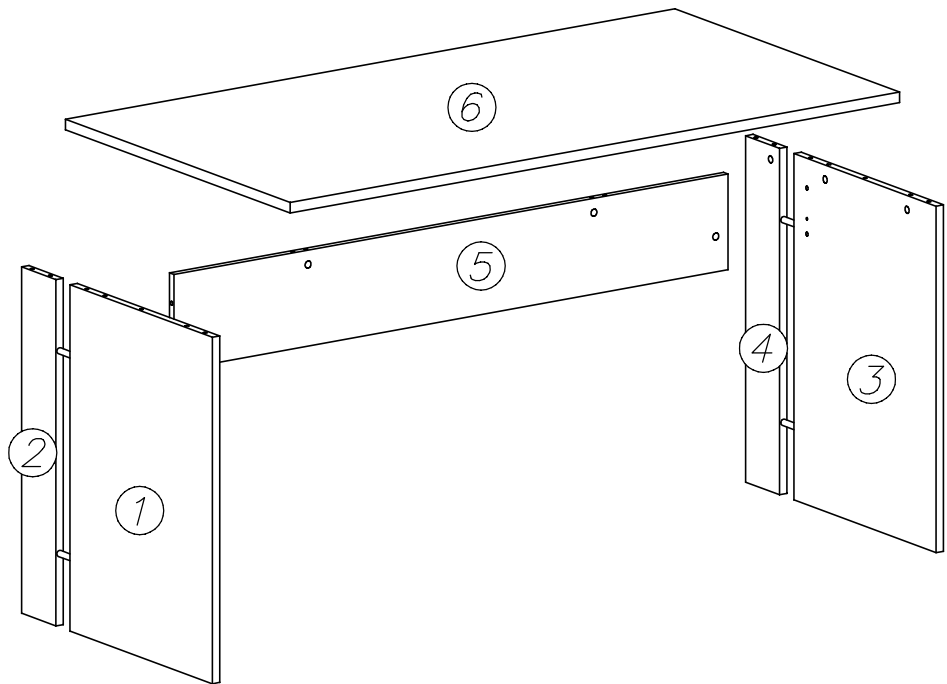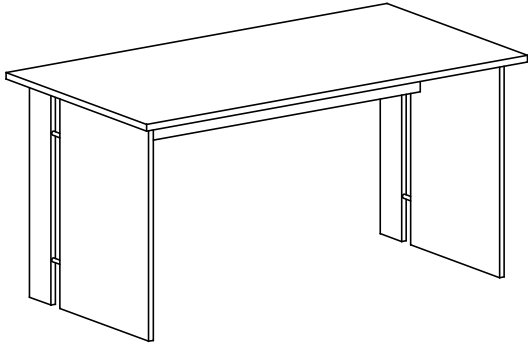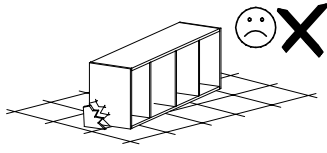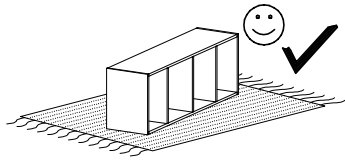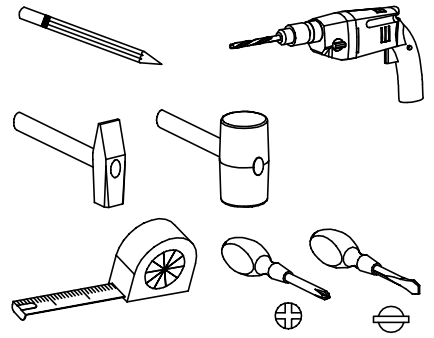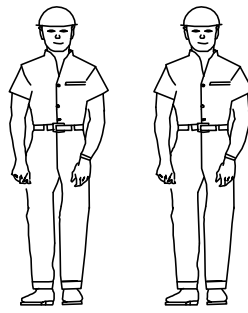
Schreibtisch 150





B4

ø8 x 95 x4

B1

ø8 x 35 x14

K5

x10


K3

ø15 x 14 x6


K2

ø15 x 16 x4

R12

ø13 x 50 x4










W1

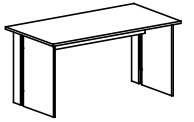
x2

P3

x6

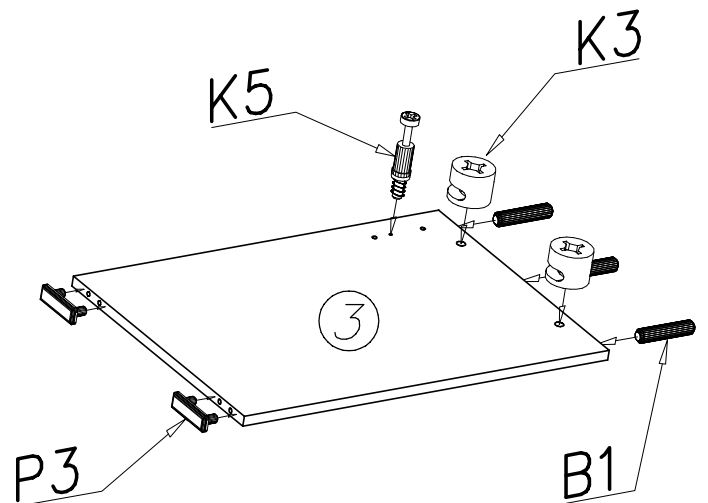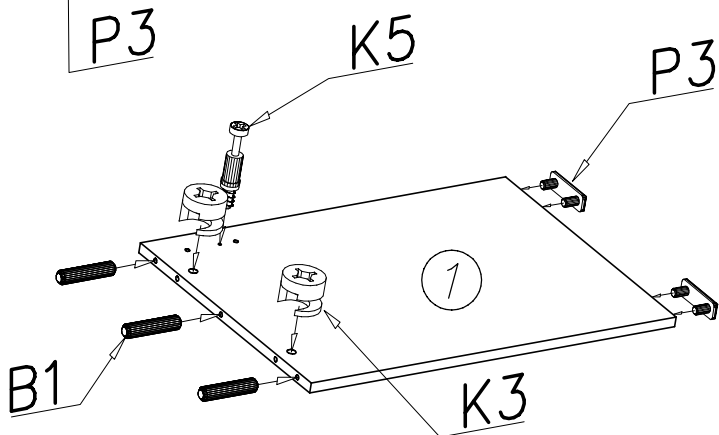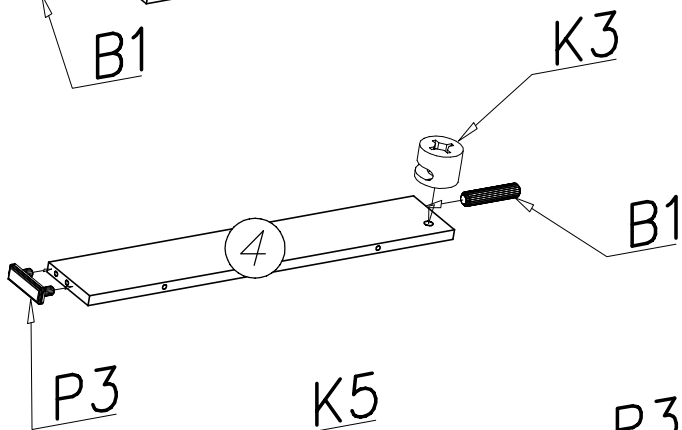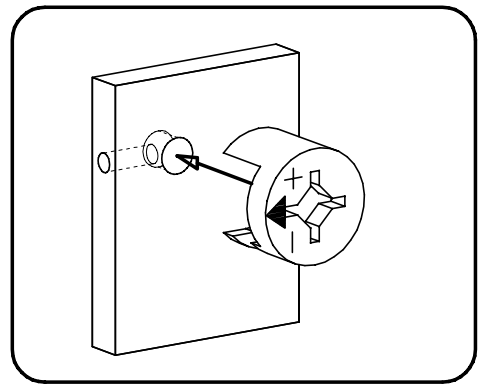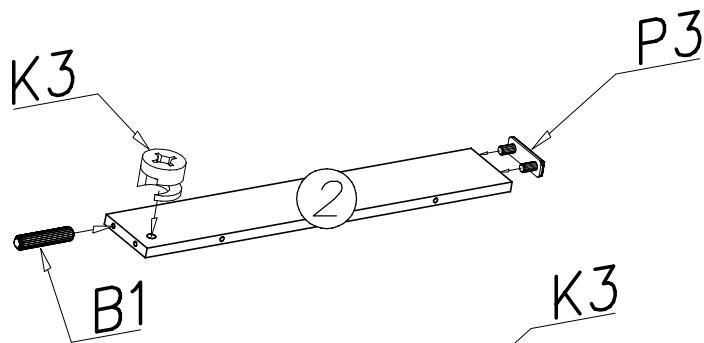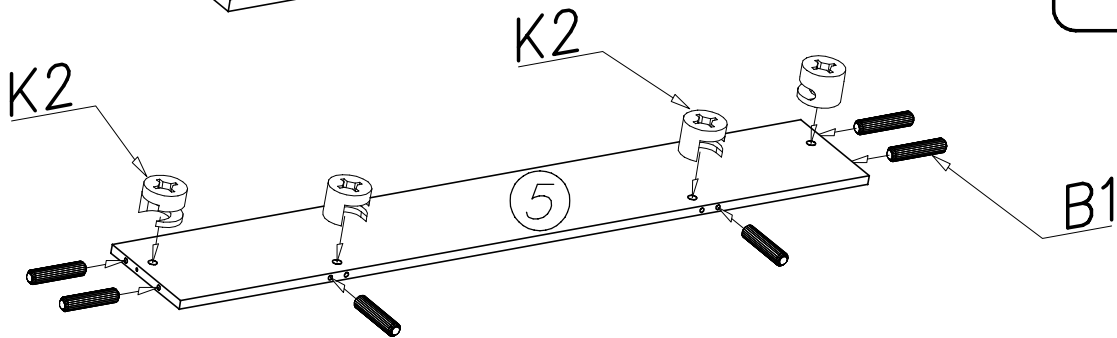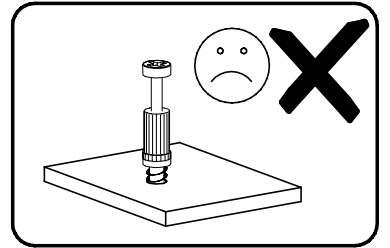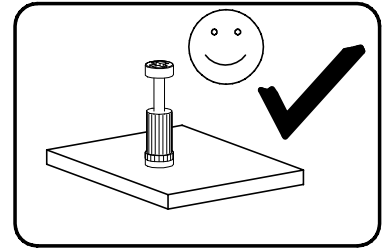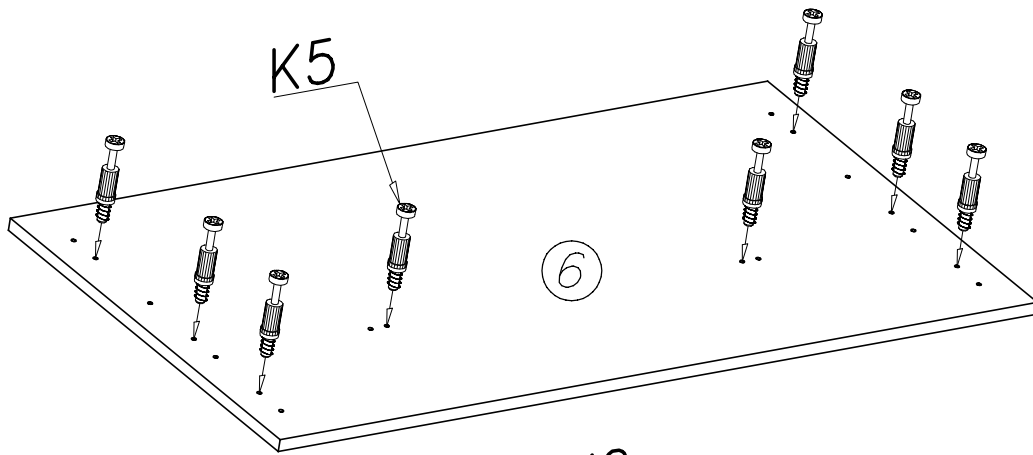


I

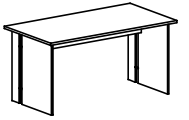




II

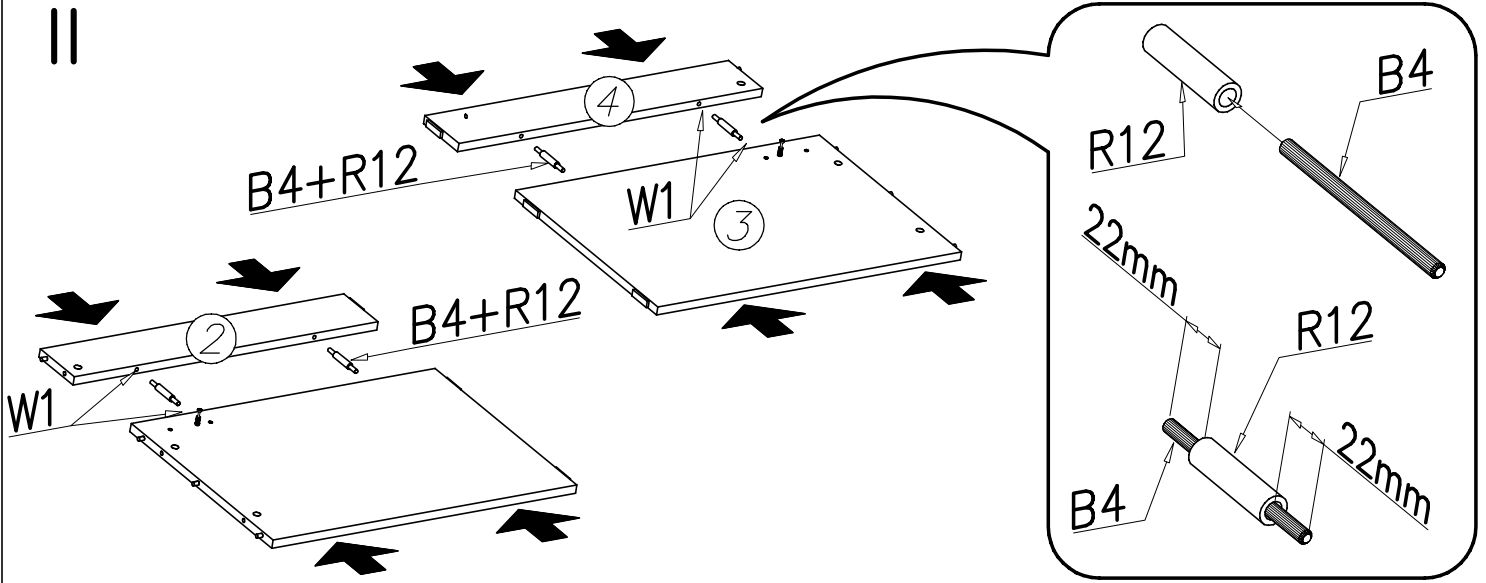

III

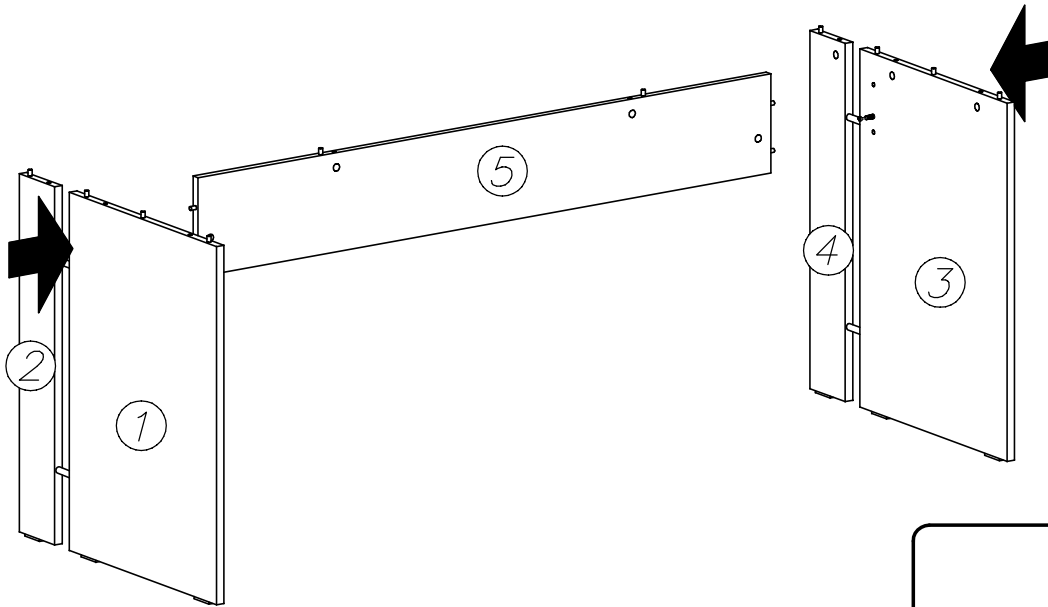

IV

